


CueScript

A WAY WITH WORDS...

PTZ Prompter

Parts, Assembly and Mounting Manual

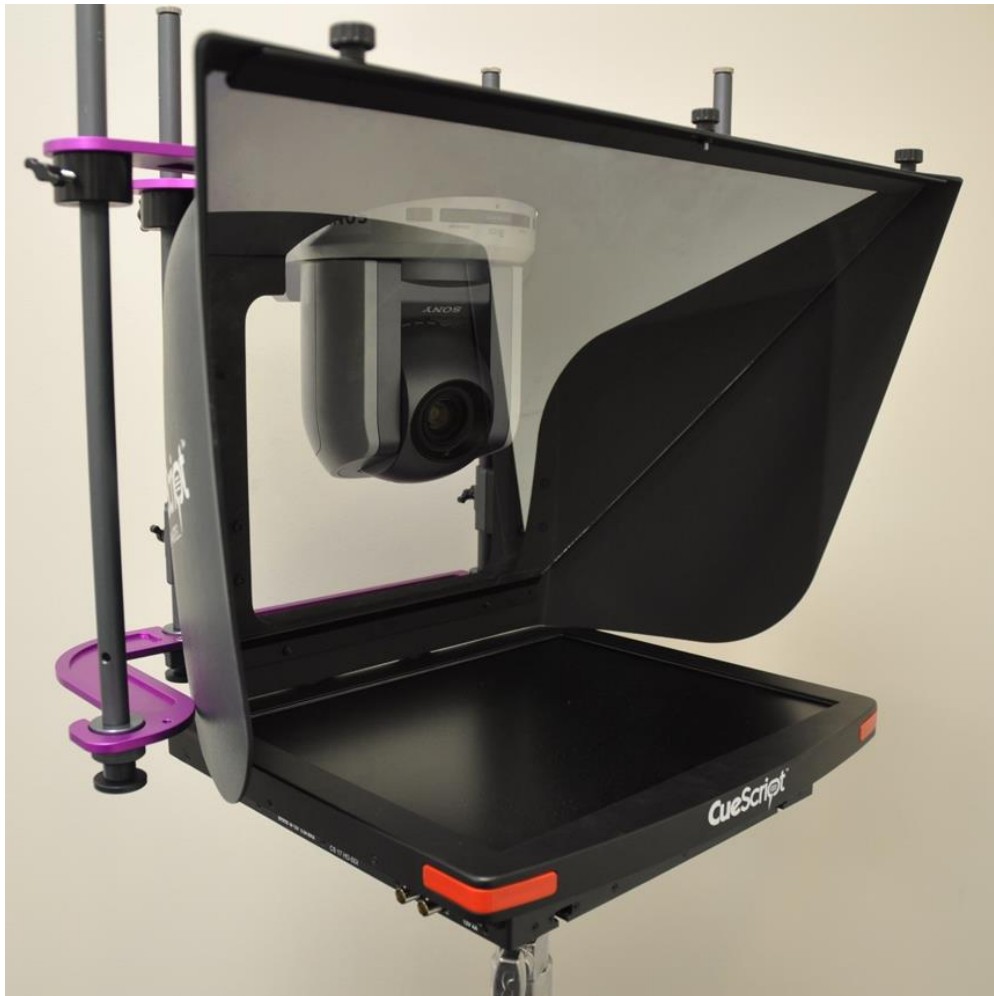

Contents

1	Parts:	3
1.1	CSHPTZ: PTZ Hood with glass and light shroud.....	3
1.2	PTZ Rods with captive end screws (4).....	3
1.3	Roll Around Mount with T-rails (2) and VESA screws (4).....	4
1.4	Lower Mounting Bracket	4
1.5	Upper Mounting Bracket (2 x ¼ 20" camera screws)	4
2	Mounting to a Roll Around Stand	5
2.1	Step 1	5
2.2	Step 2	5
3	Mounting to a Tripod	6
3.1	Step 1	6
3.2	Step 2	6
3.3	Step 3	6
3.4	Step 4	7
3.5	Step 5	8
3.6	Step 6	8
3.7	Step 7	8
3.8	Step 8	8
3.9	Step 9	9
3.10	Step 10	9
3.11	Step 11	9
3.12	Step 12	10
3.13	Step 13	10
	Notes:.....	11

1 Parts:

1.1 CSHPTZ: PTZ Hood with glass and light shroud




1.2 PTZ Rods with captive end screws (4)



1.3 Roll Around Mount with T-rails (2) and VESA screws (4)



1.4 Lower Mounting Bracket

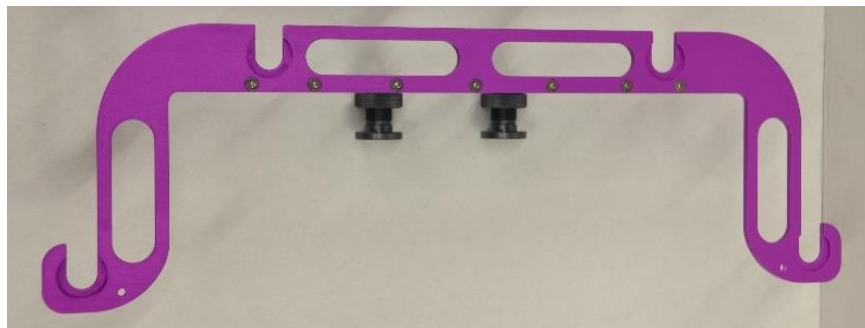

1.5 Upper Mounting Bracket (2 x ¼ 20" camera screws)



2 Mounting to a Roll Around Stand

2.1 Step 1

Mount the roll around adapter to the monitor.

- a. Use T-Rail system for CSM Monitor.
- b. Use 4 VESA thumb screws for EMC Monitor (EMC15 75mm, EMC17 100mm)



(a.)



(b.)

2.2 Step 2


Attach the Roll Around Mount to the stand via 5/8" pin. Make sure the thumb screws on the Roll Around Mount are secure.



3 Mounting to a Tripod


3.1 Step 1

Remove 3 hex head screws from the Roll Around Mount.

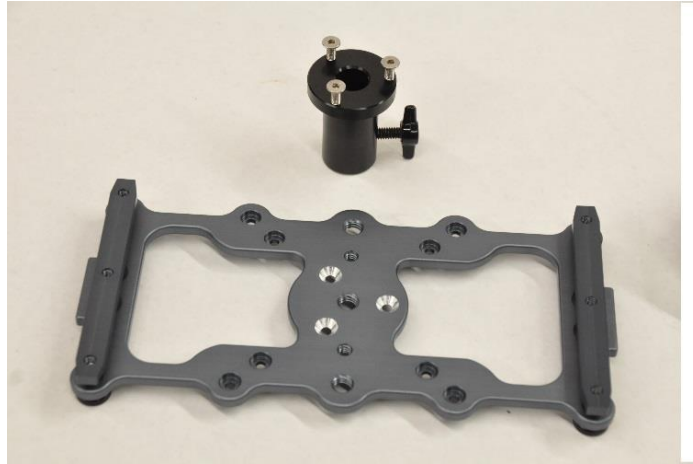

3.2 Step 2

Attach camera plate to the bottom of the monitor bracket using the 3/8" and 1/4 20 holes.

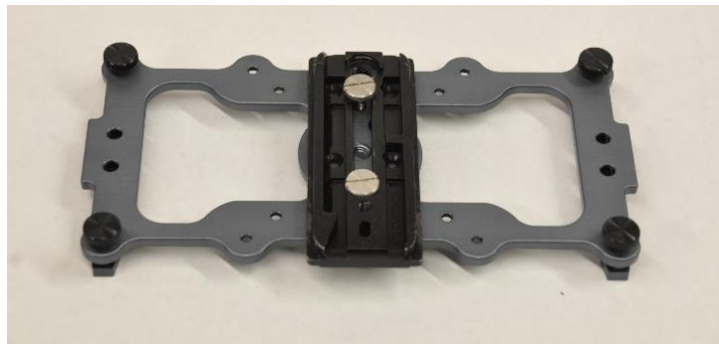


3.3 Step 3

- Use T-Rail systems for CSM Monitor.



- b. Use 4 VESA thumb screws provided for EMC Monitor.

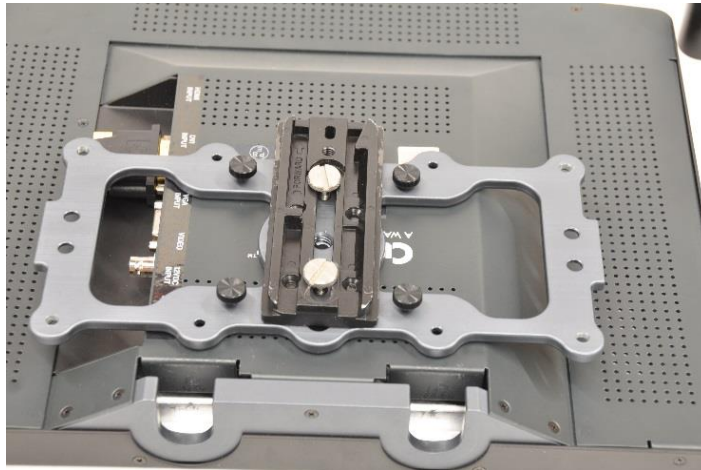

3.4 Step 4

Attach the lower mounting bracket to the monitor receptacles via the 2 extrusions. Make sure the 2 circular bosses are secure.



3.5 Step 5

Attach the 4 PTZ Rods to the lower mounting bracket receptacles. Make sure the circular bosses are secure.




3.6 Step 6

Remove the 4 captive end screws from the top of the PTZ Rods.

3.7 Step 7

Slide the PTZ Hood onto the 2 rear-center PTZ Rods so that that hood and monitor sit flush.

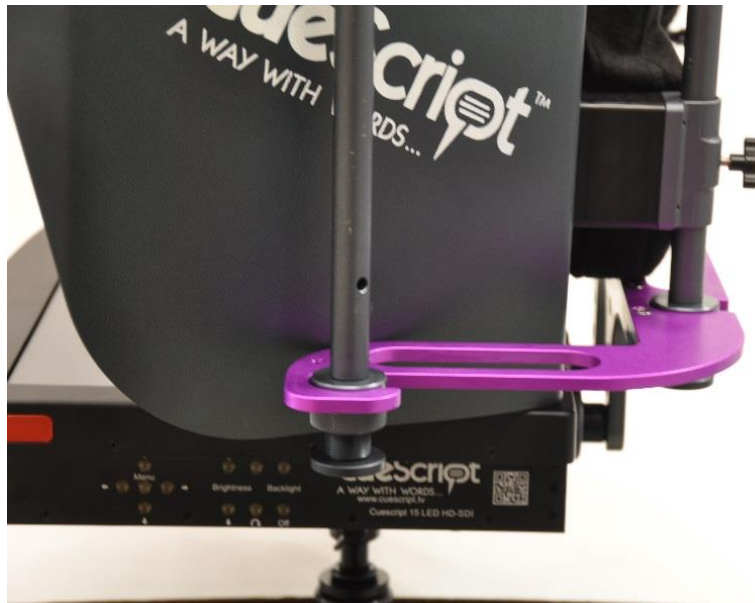

3.8 Step 8

Tighten the T-screws on the back of the PTZ Hood.


3.9 Step 9

Using the ¼ 20 screws provided, attach PTZ camera onto upper mounting bracket. Leave the camera screw loose so that the camera can be adjusted once inside the hood.



3.10 Step 10

Slide the upper mounting bracket over the 4 PTZ Rods. Make sure the T-screws are tight on the 4 mounting receptacles.

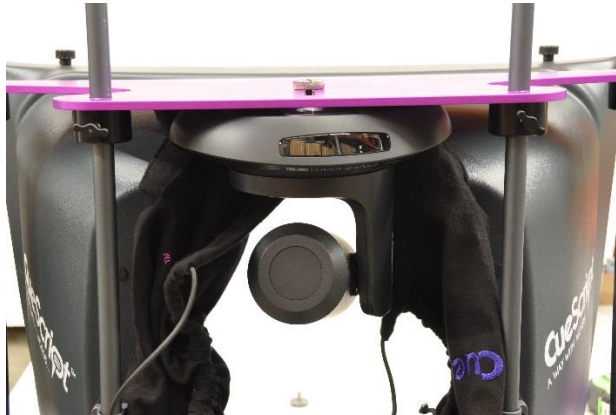

3.11 Step 11

Align the PTZ camera inside the hood so the lens is as close to the glass as possible.



3.12 Step 12

Cover the rear opening of the hood with the light shroud provided (cut and shape this as required).



3.13 Step 13

Re-attached the 4 captive screws to the top of the PTZ Rods.

This image shows a full page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page, providing a template for handwriting practice or general writing. There are no margins, text, or other markings on the page.

CUESCRIPT

UK OFFICE

Victoria House
Harestone Valley Road
Caterham, Surrey CR3 6HY
T: +44 (0) 20 3757 8880

support@cuescript.tv
www.cuescript.tv

REV C:4/1/17